

# Menu Tree



## Menu

__Exit	
__Set/Reset Prog	
__Back	
__Off/Idle (On/Off)	<i>(An 'Off' Setting disables all outlet functionality)</i>
__Manual Temp (Value)	<i>(Selects and holds a constant temperature)</i>
__On Tap	<i>(Selects and holds a constant temperature for keg storage)</i>
__Back	
__Domestic Lt	<i>(31 degrees)</i>
__Pale Ale	<i>(48 degrees)</i>
__Blonde	<i>(39 degrees)</i>
__Stout	<i>(54 degrees)</i>
__Brandywine	<i>(58 degrees)</i>
__Default Lager	
__Default Ale	
__User Defined Program 1	<i>(Shown when programmed)</i>
__User Defined Program 2	<i>(Shown when programmed)</i>
__User Defined Program 3	<i>(Shown when programmed)</i>
__User Defined Program 4	<i>(Shown when programmed)</i>
__User Defined Program 5	<i>(Shown when programmed)</i>
__Adjust Cur Prog	<i>(**Only accessible when an actual program is active**)</i>
__Back	
__Reset Timer	<i>(Resets the time to 00:00:00 for the current stage)</i>
__Set Stage Time	<i>(Set the time (in days) for the current stage)</i>
__Set Stage	<i>(Set the stage for the active program)</i>
__Continue Program	<i>(Continues the program when step has paused)</i>
__Programs	
__Back	
__Add	<i>(Add a new custom program and store to memory)</i>
__Review	<i>(Allows you to select and review a program stored on device.)</i>
__Remove	
__Usage	<i>(Display the time the heating/cooling unit has been active)</i>
__SD Card	<i>(Functions available for SD Card and Log Data)</i>
__Back	
__Upload Log Data	<i>(Uploads system log data to SD card for external viewing)</i>
__Clear Log Data	<i>(Clears all stored log data for the Fermostat)</i>
__Import Programs	<i>(Downloads programs stored to the SD Card)</i>
__Setup	<i>(System Configuration Settings)</i>
__Back	
__Temp Scale (F/C)	
__Delta Temp (Setting)	<i>(Sets the allowable differential temp before activation)</i>
__HeatEnable (On/Off)	<i>(Enable/Disable Heat Outlet)</i>
__CoolEnable (On/Off)	<i>(Enable/Disable Cool Outlet)</i>
__HeatCycle (Duration - mins)	<i>(Sets the recycle time for the Heat outlet)</i>
__CoolCycle (Duration - mins)	<i>(Sets the recycle time for the Cool outlet)</i>
__Backlight (Setting)	<i>(Sets the delay for backlight to shut off (0 = Always On))</i>
__DemoMode (On/Off)	<i>(a high speed mode for test/review of a program (1h 2s))</i>
__ResponseEn (On/Off)	<i>(Option to disable Response Enable error checking feature)</i>
__Clock	
__Factory Reset	<i>(Restores all internal settings to factory default)</i>
__About	<i>(Displays system information and Errors.)</i>
__Errors	<i>(Shows the current errors set. Ability to clear errors also.)</i>